

*West Mead District #1
Foam Operation Guidelines*

ENGINE 28-13

***FOAM IS TO BE USED ANYTIME FIREFIGHTERS ARE ENTERING A
IDHL ATMOSPHERE OR WHEN PROPERTY CAN BE SAVED***

FOAM PRO SYSTEM OPERATION

To Flow Foam

Step #1 Establish water flow out of foam handlines.

Step #2 Press red button on FoamPro control head to turn **ON** pump

To Stop Foam

Step #1 Press red button on FoamPro control head

To Flush System (must be completed after every use)

Step #1 Press red button on FoamPro control head to turn **OFF** pump

Step #2 Establish water flow out of foam handlines

Step #3 Run water out of handlines until lines are discharging clear water

Note:

System is set at **.05% FOR INITIAL ATTACK**

Set system to **.02% FOR OVERHAUL**, this setting provides smaller bubbles that will penetrate fuel more efficiently.

Switch Percentage

Step #1 Use white select button on FoamPro control head, press until red light is **ON** underneath the % sign

Step #2 Use **UP ARROW** or **DOWN ARROW** on bottom of FoamPro control head to adjust percent