

*West Mead District #1  
Foam Operation Guidelines*

***FOAM IS TO BE USED ANYTIME FIREFIGHTERS ARE ENTERING A  
IDHL ATMOSPHERE OR WHEN PROPERTY CAN BE SAVED***

**FOAM PRO SYSTEM OPERATION**

**To Flow Foam**

Step #1 Establish water flow out of foam handlines.

Step #2 Open foam tank

Step #3 Press red button on FoamPro control head to turn **ON** pump

**To Stop Foam**

Step #1 Press red button on FoamPro control head

**To Flush System (must be completed after every use)**

Step #1 Establish water flow out of foam handlines

Step #2 Close foam tank valve

Step #3 Open flush valve

Step #4 Press red button on FoamPro control head to turn **ON** pump

Step #5 Run water out of handlines until lines are discharging clear water

Step #6 Press red button on FoamPro control head to turn **OFF** pump

**Note:**

System is set at **.05% FOR INITIAL ATTACK**

Set system to **.02% FOR OVERHAUL**, this setting provides smaller bubbles that will penetrate fuel more efficiently.

**Switch Percentage**

Step #1 Use gray select button on FoamPro control head, press until red light is **ON** underneath the % sign

Step #2 Use **UP ARROW** or **DOWN ARROW** on bottom of FoamPro control head to adjust percent